

Please check the box below to proceed.

I'm not a robot



reCAPTCHA  
[Privacy](#) - [Terms](#)

## 4•4 Fuel and exhaust systems



4.4 Remove screws (arrowed) from the fuel pump/fuel level sending unit access cover



4.6 Remove the nuts that retain the fuel pump to the fuel tank



4.7 Lift out the pump. Angle it to avoid damaging pump screen on the bottom



4.8 Remove the blue protective connector from the main electrical connector



4.9 Lift tab on main electrical connector and disconnect it from the fuel pump



4.12 Prise off the retaining clip and detach the filter (sock) from the pump

### 4 Fuel pump (fuel injection models) - removal and refitting

**Note:** Refer to the warning note in Section 7 before proceeding.

#### Removal

- 1 Detach the cable from the negative battery terminal. **Caution: If the stereo in your car is equipped with an anti-theft system, make sure you have the correct activation code before disconnecting the battery.**
- 2 Relieve the fuel system pressure (see Section 2).
- 3 Remove the rear seat (see Chapter 11).
- 4 Remove the bolts that retain the fuel pump access cover (see illustration).
- 5 Unplug the electrical connector from the fuel pump and detach the fuel lines.
- 6 Remove the fuel pump assembly retaining nuts (see illustration).
- 7 Remove the fuel pump from the tank (see illustration).
- 8 Remove the electrical connector protective cover (see illustration).
- 9 Remove the electrical connector from the fuel pump (see illustration).
- 10 Squeeze the hose clamps with a pair of pliers - remove the upper clamp from the hose and slide the lower clamp half-way up the hose, off the fuel pump inlet.
- 11 Separate the pump from the fuel pump bracket.
- 12 Remove the sock filter from the end of the pump (see illustration).

#### Refitting

13 Refitting is the reverse of removal. Be sure to use a new gasket on the cover plate flange.

### 5 Fuel level sending unit - check and renewal

**Note:** Refer to the warning note in Section 7 before proceeding.

#### Check

- 1 Remove the fuel pump/ fuel level sending unit access cover (see illustration 4.4).
- 2 Position the ohmmeter probes onto the electrical connector terminals and check for resistance (see illustration).
- 3 First, check the resistance of the sending unit with the fuel tank completely full. The



5.2 Measure fuel level sending unit resistance with float raised (full tank) and then with the float near the bottom (empty)

resistance of the sending unit should be about 2 to 5 ohms.

4 Now check the resistance of the unit with the fuel tank almost empty. The resistance should be 150 to 155 ohms.

5 If the readings are incorrect or there is very little change in resistance as the float travels from full to empty, renew the sending unit.

**Note:** The fuel level sending unit can also be checked by removing the unit (see paragraphs 6 to 10). Check the resistance while moving the float from full (arm at highest point of travel) to empty (arm at lowest point of travel) (see illustration).

#### Renewal

- 6 Remove the rear seat (see Chapter 11).
- 7 Remove the fuel level sending unit/fuel pump access cover (see illustration 4.3) and lift the access cover from the floor of the car.



5.5 If necessary, remove the fuel level sending unit and measure the resistance while manually operating the float

# Table of Contents

## 91 Honda Civic Hatchback Repair Manual {Two little adorable siblings reading a book in mattress around Christmas tree with lights and illumination. Happy loved ones of two Young ones

### Why do we use it?

91 Honda Civic Hatchback Repair Manual A little blonde girl in a very festive gown by using a book in her arms sits beside smooth toys towards the track record of a Christmas tree and reads a book leading the site with her position.

### Where does it come from?

91 Honda Civic Hatchback Repair Manual Be sure to simply click "I am not a robot" to continue Access to this website page has long been denied simply because we imagine you're applying automation applications to look through the web site. Th is may well occur due to the subsequent: Javascript is disabled or blocked by an extension (ad blockers for instance) Your browser won't guidance cookies You should Be sure that Javascript and cookies are enabled on your browser and that you're not blocking them from loading.

91 Honda Civic Hatchback Repair Manual DžÑ•D¾D±D¾Dµ D¾D±Ñ•Ñ, D¾Ñ•Ñ, DµD»ÑCEÑ•Ñ, D²D¾ (D;D~) DÝD¾D½Ñ€D°D²D, D»D°Ñ•ÑCE D°D²Ñ, D¾Ñ€€, D, D½Ñ, DµÑ€DµÑ•D½D¾ D; D, Ñ^DµÑ, , D; Ñ€D¾Ñ‡D, Ñ, D°D»D° D°D½D, D³Ñf Ñ• ÑfD´D¾D²D¾D»ÑCEÑ•Ñ, D²D, DµD¼, D±D¾D»ÑCEÑ^Dµ D° D¶D°D½Ñ€Ñf D¾Ñ•Ñ, Ñ€D¾Ñ•ÑŽD¶DµÑ, D½Ñ<D¹ D»ÑŽD±D¾D²D½Ñ<D¹ Ñ€D¾D¼D°D½ D; D¾D´Ñ...D¾D´D, Ñ, . As Tracyâ€™s and Danâ€™s situations crisscross, Tracyâ€™s path results in being harmful. Itâ€™s stirring up her possess haunted previous and a a long time-aged conspiracy in Cedar Grove which includes erupted in murder. Attending to the truth is all that issues. But whatâ€™s Tracy ready to hazard to be a killer receives closer to her and threatens Anyone she enjoys?.

GetFreeEbooks is often a web site that can Incorporate authors with readers. At there, viewers constantly can download absolutely free ebooks lawfully devoid of registration. Also, there are a few evaluations of book that can assist you really know what books are ideal for you..

What PDF Download presents is just too straightforward to be worthwhile. Obviously, this doesnâ€™t signify the application doesnâ€™t have any merit. It might nonetheless be handy for those who download and entry PDF data files quite a bit from their Firefox browser..

**PDF Copyright ID :** *7dv9h4mo50btj2lpnk1w*

References:

[91 Honda Civic Hatchback Repair Manual](#)